


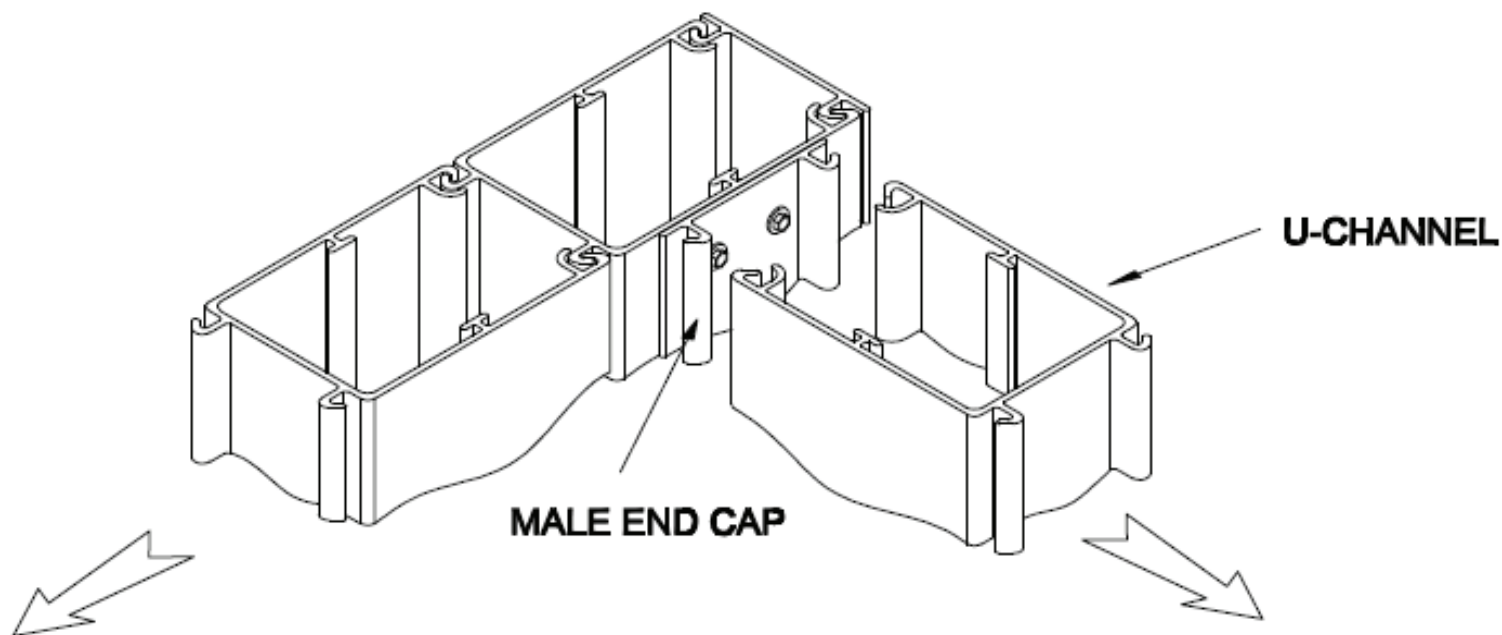

DRAWING J: basic 90 degree corner/return



To create a 90 degree corner / return anywhere on the wall, simply pre-attach a male end cap to the u-channel face with stainless steel bolts, nut and flat washers on 24 inch centers prior to driving the u-channel. You can then begin drive u-channel parts starting on this end cap as shown.